

DISHWASHER OPERATING INSTRUCTIONS

30 minutes prior to using the dishwasher do the following:

- 1 Insert overflow drain tube in the drain
- 2 Place the 2 scrap screens in place
- 3 Turn Main switch (A) to position 1
- 4 Close the lid. Wash tank will fill automatically.
- 5 Wait for Middle Light button (C) to turn green and both thermometer gauges (G and H) are in the red zone.

Dishwasher is now ready to wash dishes

- 1 Turn Main switch (A) to position 2
- 2 Open lid
- 3 Load a rack of dishes. Close the lid gently (DO NOT SLAM THE LID DOWN)
- 4 Dishes will wash and rinse. Left hand light (D) will be on and will turn off when the cycle is over (takes ~ 2 minutes)
- 5 When left hand light (D) is off, open lid slowly and remove rack. Let dishes air dry before removing from rack. Do not towel dry.


When finished using the dishwasher

- 1 Turn Main switch (A) from position 2 to Machine Off position 0
- 2 Remove the scrap screens and the overflow drain tube carefully as the water in the wash tank will be hot.
- 3 Clean scrap trays and with the drain tube place on inside of dishwasher
- 4 Clean stainless steel sink and counters around the dishwasher
- 5 Put the lid in the up (open) position so the machine can air dry

REMINDER: Please ensure the taps at the sink are turned off

DISHWASHER OPERATING INSTRUCTIONS

CONTROL PANEL

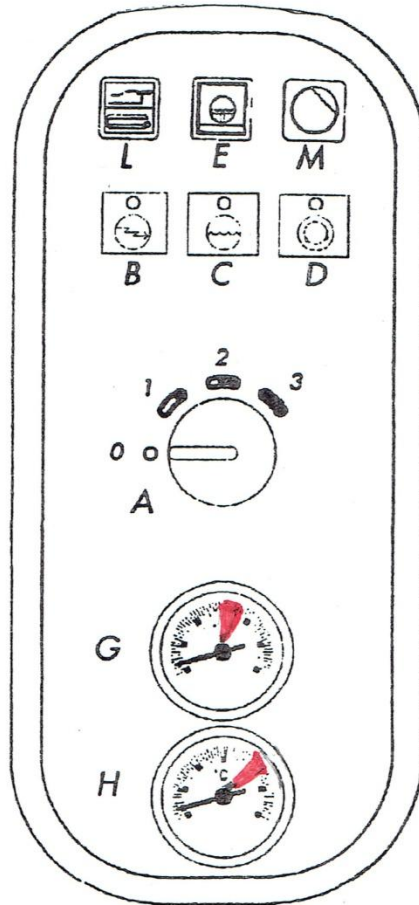

- A Main Switch
 - 0 Machine off
 - 1 Fill wash tank and short cycle
 - 2 Medium wash cycle
 - 3 Longer wash cycle
- B Pilot Lamp "MACHINE ON"
- C Pilot Lamp "MACHINE READY"
- D Pilot Lamp "MACHINE WORKING"
- E Not used (Do not touch)
- G Tank Thermometer
(Red mark at 140 F)
- H Booster Thermometer
(Red mark at 180 F)
- L Selector manual/automatic
(Do not touch – set on automatic)
- M Start cycle push button
(Do not touch)

DISHWASHER OPERATING INSTRUCTIONS

REVISION LOG

REVISION No.	DATE	APPROVED BY:	REVISION DETAILS
0	April 4th, 2016	CSA Hospitality Committee	Original issue of document